

# Lisvane Memorial Hall

## Dishwasher Operating Instructions

- Open dishwasher door and ensure filter is clean and **both drain plug (grey tube) and filter is in place**. (close door)
- Switch on main isolator switch (left of window).
- Press power button (green Light on) to fill dishwasher and commence water heating cycle.
- **Wait** until “Machine Ready” and “Start” lights are illuminated (usually around 30 minutes)
- Place wash tray inside machine, close door and select either 2 or 3-minute cycle:  
Cycle timer button: On = 3-minute wash  
Off = 2-minute wash.
- Press the “Start Wash Cycle” button to commence wash cycle. (Detergent and rinse aid are added automatically).
- When cycle has finished, open door with caution (hot water), Re-load machine and re start as necessary.
- At end of use drain machine by **removing drain plug and pressing the power button once** (green light to off).
- The drain pump will run for a pre-determined time to empty the machine.
- Please remove, clean and replace the filter inside the machine (debris can be emptied into waste disposal unit in adjacent sink. **Please leave drain plug in basket inside machine**)
- Switch off main isolator.

Please report any issues with the machine to  
[lisvanememorialhall@gmail.com](mailto:lisvanememorialhall@gmail.com)